

Danfoss RTW range

# How to **change** your thermostatic **sensor**

Change your old thermostatic sensor in a few easy steps.

1

Loosen your old thermostatic sensor.



2

Identify your valve by using the adapter selection guide below.



3A

Mount your new RTW sensor with either an RA or M30 connection.



3B

With other connections firstly mount correct adapter and then the RTW sensor.



## Adapter selection guide



RAV  
(Old Danfoss)



RAVL  
(Old Danfoss)



RTD  
(Old Danfoss)



M30  
(Ø30 mm)  
Helmeier TA,  
Oventrop,  
Honeywell



RA  
(Danfoss)



M28  
(Ø28 mm)  
Orkyl, Conap,  
Herz, MMA



## Find the **perfect match** for **your system**

It is important that you examine your existing system before choosing one of the many options for Danfoss thermostatic control. You may only have to change the sensor or you may have to buy separate adapters to make it fit your existing system. Below is a list of adapters available to buy separately.



**M28** (Orkli)  
M28 x 1,5 mm



**M28** (MMA)  
M28 x 1,5 mm



**RAV** (Old Danfoss)  
34 mm



**RAVL** (Old Danfoss)  
26 mm



**M28** (Herz)  
M28 x 1,5 mm



**M28** (Comap)  
M28 x 1,5 mm

If none of the adapters above fits your system we recommend changing your valves as well.

